


Move selector lever to "P" setting.

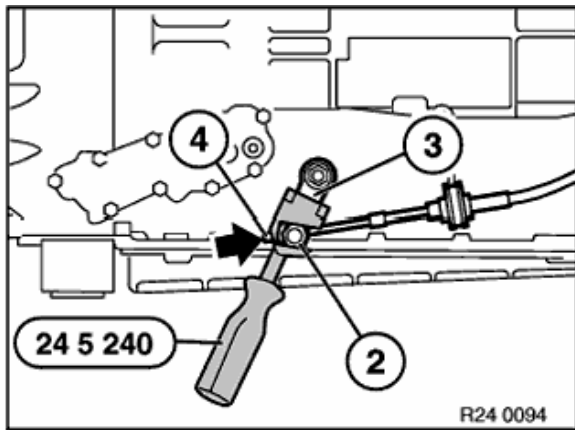

**For cable clamping up to 8.95:**

Fit special tool 24 5 240 to the shift lever.

**Note:**

Only possible to fit in "P" setting.


Loosen nut (2).

Press shift lever (3) forwards (park setting). Press cable (4) in direction of arrow, then release again.

Tighten nut (2).

Tightening torque,

refer to Technical Data 25 16 2AZ

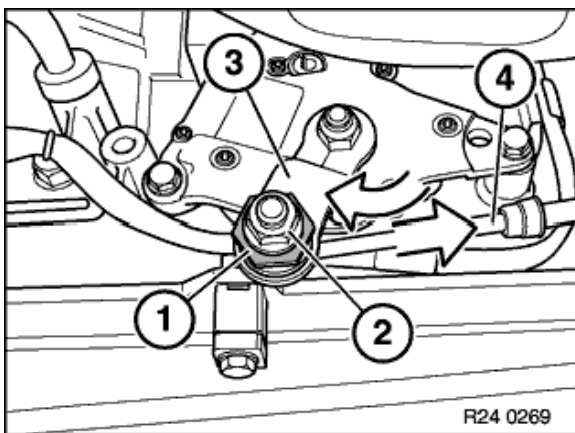

**Cable clamping from 8.95:**

Brace clamping section (1) and loosen nut (2).

Press shift lever (3) forwards (park setting). Press cable (4) in direction of arrow, then release again.

Brace clamping section (1) and tighten nut (2).

Tightening torque,

refer to Technical Data 25 16 2AZ