

meeknet.co.uk/e64

Car and Key Memory Settings E60 (5 Series), E63/E64 (6 Series)

- “=” - Factory setting  
 “ \* ” - Customer selectable using the Control Display

<b>Anti-Theft System</b>	
Interior sensor	= Active
	Not Active
Arming/Disarming – disarming only with remote control	Not Active
Arming/Disarming – locks and remote control	= Active
Tilt Sensor	= Active
	Not Active
Confirmation – flash when unlocking *	= Active
	Not Active
Confirmation – acoustically when unlocking *	= Active
	Not Active
Confirmation – flash when locking *	= Active
	Not Active
Confirmation – acoustically when locking *	= Active
	Not Active
<b>Door locks * - Central Locking</b>	
Lock button – All doors *	Not Active
Lock button – Driver’s door only *	= Active
Lock after driving *	Active
	= Not Active
Relock door if not opened *	Active
	= Not Active
<b>Power windows</b>	
1 touch driver window open	= Active
	Not Active
1 touch driver window close	= Active
	Not Active
1 touch passenger window open	= Active
	Not Active
1 touch passenger window close	= Active
	Not Active
1 touch rear window open	= Active
	Not Active
1 touch rear window close	= Active
	Not Active
Convenience open, remote control	= Active
	Not Active

<b>Lighting</b>	
Daytime running lights	Active
	= Not Active
Pathway lighting *	0s – 240s
	= 40s
Set of threshold values (daylight sensor sensitivity)	= Sensitive
	Normal
	Very sensitive
<b>Heating / A/C / Ventilation</b>	
Fan - Fan correction	= Not Active
	Increase
	Decrease
Vents – Flaps set point value correction	= Not Active
	+3 degrees
	+2 degrees
	+1 degrees
	-1 degrees
	-2 degrees
	-3 degrees
Vents – OFF memory	Active
	= Not Active
Vents - recirculated air memory	= Active
	Not Active
Vents - A/C off with AUTO	Active
	= Not Active
<b>Seat and Mirror Memory *</b>	
<b>PDC *</b>	
Monitor display on *	