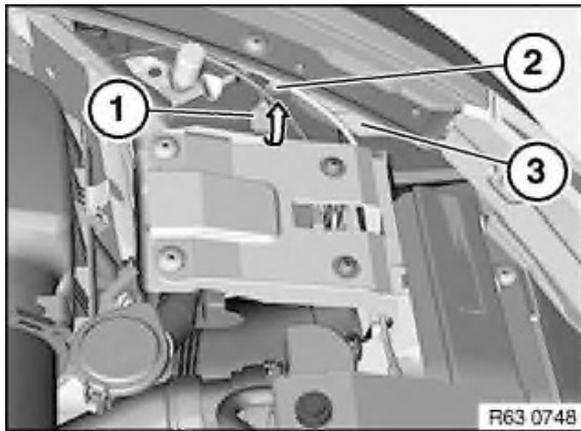


**Warning!**

Version with xenon headlights: Danger to life due to high voltage! Therefore, before removing, disconnect all components from the power supply (lighting system and ignition off).

Work on the entire xenon lighting system (control unit, ignition unit with bulb) may only be carried out by specialist personnel.

Follow instructions for handling light bulbs (exterior lights).

**Bulb, interior:**


Turn lever (1) in counterclockwise direction and pull bulb holder (2) towards rear out of direction indicator housing (3).

Remove bulb from bulb holder (2).

Installation:

Note type of bulb.


Make sure bulb holder (2) is correctly seated in direction indicator housing (3).

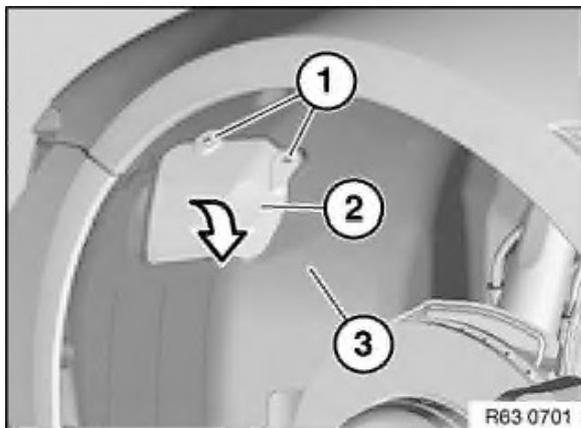**Bulb, exterior:****Note:**

Front wheel removed for purposes of clarity.

Release screws (1).

Feed out repair cover (2) in direction of arrow from front wheel arch trim (3) and fold down.

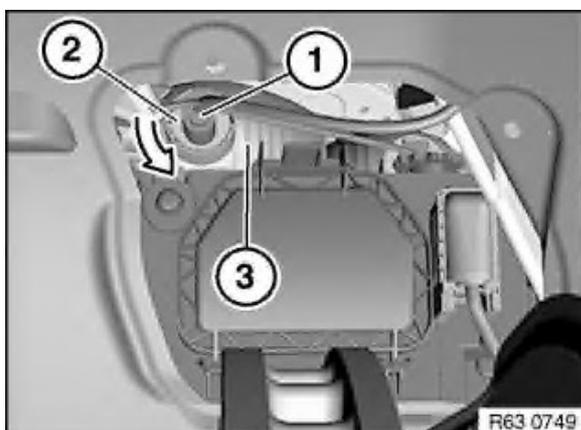

Disconnect plug connection (1).

Turn bulb holder (2) in counterclockwise direction and pull towards rear out of direction indicator housing (3).

Remove bulb from bulb holder (2).

Installation:

Note type of bulb.

Make sure bulb holder (2) is correctly seated in direction indicator housing (3).